


FOAM FILLED ROLLER DOOR WITH SURROUNDING BOX USING A ANSA ROLLSMART CONTROL BOX, ELLARD MOTOR QUICK STEP by STEP INSTALLATION GUIDE

- 1 – Check Contents and condition of parts received
- 2 – Check for New One Page Installer Guides
- 3 – Check Brickwork opening, dimensionally and condition
- 4 – Fit Guides to brickwork
- 5 – Fit Box complete with Shaft (**DO NOT** Fit or Connect Curtain)
- 6 – Fit Control Box to wall
- 7 – Connect Motor to Control Box or Motor test Leads – See Diagram below.

NOVOROL & ANSA ROLLSMART CONTROL BOX Wiring Terminals

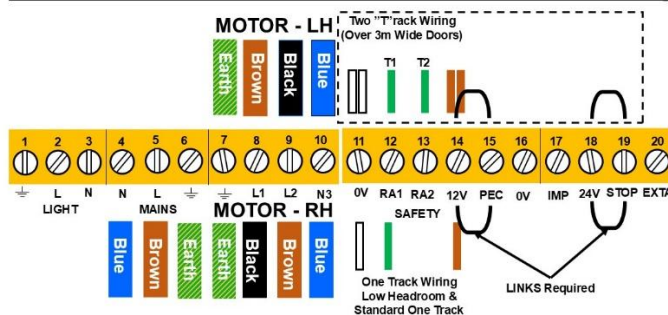

- 8 – Turn Control Box on at Mains
- 9 – Switch DIP 3 to ON – This puts the motor in HOLD TO RUN MODE (Or Use Motor Test Leads)
- 10 – Press and Hold the OVAL Button, the Shaft should rotate
- 11 – Get the shaft to the Closed Position
- 12 – Put the Curtain in place – Ensure the protection for the top of the guides is in place.
- 13 – Fit the White Wheels
- 14 – Connect the Curtain to the Shaft
- 15 – Using the Wand and the Oval Button to get the Curtain set in the closed Position
- 16 – Run the Curtain to the top, while turning the top limit Switch in the “- / Minus” direction (This should cause the curtain to stop opening when the limit meets the door)
- 17 – When the Door, stops, turn the Wand in the “+ / Plus” direct the door should go up in series of short bursts, stopping when the door is fully open

NOTE – DO NOT ADJUST THE LIMITS WITH A WAND IN A DRILL

ONLY ADJUST MANUALLY

- 18 – Run the door Top to Bottom and Bottom to Top to confirm the Limits are correct – Turn the Mains Off
- 19 – Fit the track(s) to the Guides – see full fitting guide
- 20 – With the door full open go through the commissioning process – See ANSA Instructions

Programming Handsets

Normally the two handsets supplied are Preprogrammed

Extra handsets or Wireless devices are programmed in as follows

- A – Press and hold the OVAL Button for 5 seconds, release when the LED goes out
- B – The LED will flash once – indicating the Control box is in “ADD” Mode
- C – Take the new handset and press the button once – The LED Should Flash once
- D – Repeat for every Handset / device
- E – Once complete, apply one more Press of the Oval Button or wait 30 Seconds



SCAN QR Code
to go Full
Fitting
Instructions