
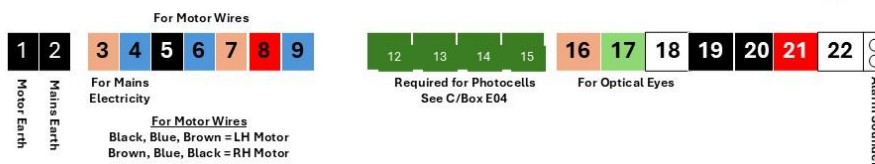


FOAM FILLED ROLLER DOOR WITH SURROUNDING BOX USING A NRG TELECO E02 CONTROL BOX, ELLARD MOTOR AND WIRED SAFETY EDGE QUICK STEP by STEP INSTALLATION GUIDE

- 1 – Check Contents and condition of parts received
- 2 – Check for New One Page Installer Guides
- 3 – Check Brickwork opening, dimensionally and condition
- 4 – Fit Guides to brickwork
- 5 – Fit Box complete with Shaft (**DO NOT** Fit or Connect Curtain)
- 6 – Fit Control Box to wall
- 7 – Connect Motor to Control Box or Motor Test Leads – See Diagram
- 8 – Turn Control box on at the Mains

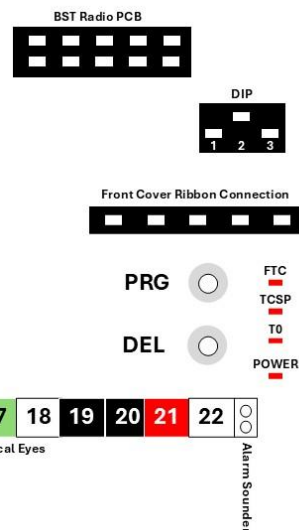

- 9 – Put Curtain over Shaft and into Guides and down to floor
 - Ensure the Protection is in place at the top of the guides
- 10 – **Fit the White Wheels at the top of the guides**
- 11 – Check the State of the Control Box,
 - Flashing “POWER” LED - “Hold to Run” Mode
 - While in Hold to Run Mode – Press & Hold “PRG” Door Opens – Press & Hold “DEL” Door Closes
 - Constantly On “POWER” LED it is in Automatic Mode
 - It needs to be in “Hold to Run” Mode
 - To go from Hold to Run to Automatic Mode, Press “PRG” & “DEL” together for 5 seconds then BEEP
- 12 – Run the shaft to the closed position
- 13 – **Connect Curtain to Shaft**
- 14 – Adjust BOTTOM Limit / Closed Position (Typically the limit nearest the back of the Garage)
- 15 – Run Curtain to TOP - While running the door to the top rotate the top limit in the “-, Minus” direction
- 16 – Adjust TOP Limit / Open Position (Typically the limit nearest the Drive / Outside)
- 17 – Using the “DEL” then “PRG” Buttons, Run the curtain from Top to Bottom and back to Top to confirm Top and Bottom Limit Positions (Adjust if required)
- 18 – Turn the Control Box Off, Wire in Safety Edge
- 19 – Check that DIP 1 is OFF – Ensure the Curtain is **NOT** in the Fully Open Position
- 20 – Turn the Control Box “ON”
- 21 – Make the Control Box Automatic – Press and Hold PRG & DEL Together until a BEEP
- 22 – Press the “UP” Button – Door OPENS
- 23 – Press the “DOWN” Button – Door CLOSES
- 24 – Press the “UP” Button – Door OPENS
- 25 – Press the “DOWN” Button – Door CLOSES – While the Door Closes, squeeze the bottom Seal, Door should stop and start opening – Safety Edge Test
- 26 – Program Handsets
 - a. Press and hold down the “PRG” Button – Until Continuous BEEP occurs, While BEEP Sounds press the handset button you want to operate the door, When the Sound becomes intermittent it signals Handset is paired to Control Box
 - b. Repeat (a) on all handsets required
 - c. Test on Curtain
- 27 – Fit any Accessories
- 28 – Fit the Rear Box If required

NOTE – DO NOT ADJUST THE LIMITS WITH A WAND IN A DRILL
ONLY ADJUST MANUALLY



SCAN QR Code
to go Full
Fitting
Instructions